


Nurapad & Nurajack Installation Guide

Fixed height paving supports are the easiest solution for an outdoor floating paving. On the paving supports any type of paving tile can be laid: concrete, marble, granite wood and any other material suitable to external uses.




1

Place the supports on the laying surface.

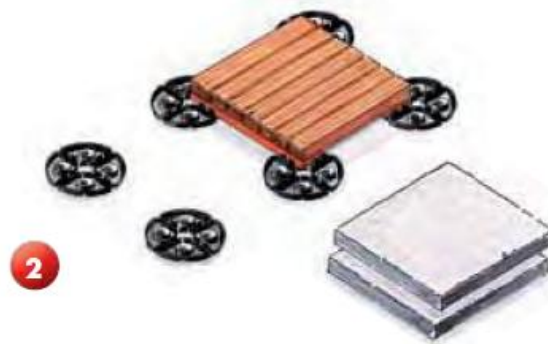

2

Lay the paving tiles on the supports as shown.

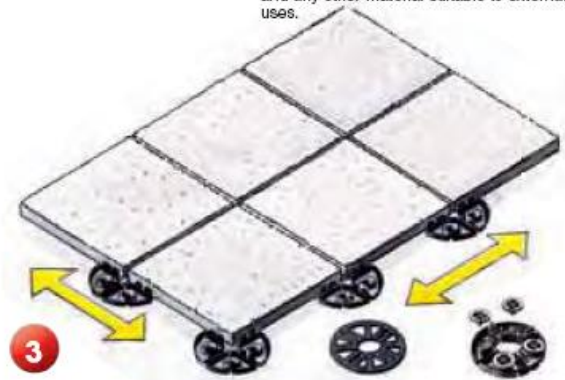

3

Make sure the paving is perfectly stable and properly aligned. Should the alignment and/or levelling be imperfect, increase the thickness where necessary by using the special universal disc-levellers or the special balancers.



4

Cut the support in two halves when it is to be applied close to the side-wall.



5

For internal corners, use only one-quarter of a support.



6

For application close to external corners, use three-quarters of a support.



7

Should it be necessary to increase thickness (height) in one or more areas, it is advisable to use the universal LH3 levelling disc or the balancers.

Nurapad & Nurajack Installation Guide



Place the supports on the laying surface as shown.



Paving centre




Nurapad & Nurajack Installation Guide

ADJUSTABLE PAVING SUPPORT "ETERNO" WITH SELF-LEVELING OR FIXED "PLUS-TEC" HEADS
Thanks to its exclusive self-leveling head, the adjustable paving support Eterno immediately and automatically compensate any gradient or difference in level present on the surface producing a perfectly stable floating paving. Moreover its innovative regulation key allows the adjustment in height of each paving support even once all paving tiles are already on.


Quantity of supports required:	
Size of tiles	Pieces / sqm.
40x40cm	6-7 supports
50x50cm	4-5 supports
60x60cm	3-4 supports

N.B. The exact number of paving supports depends on the length of the perimetrical wall.

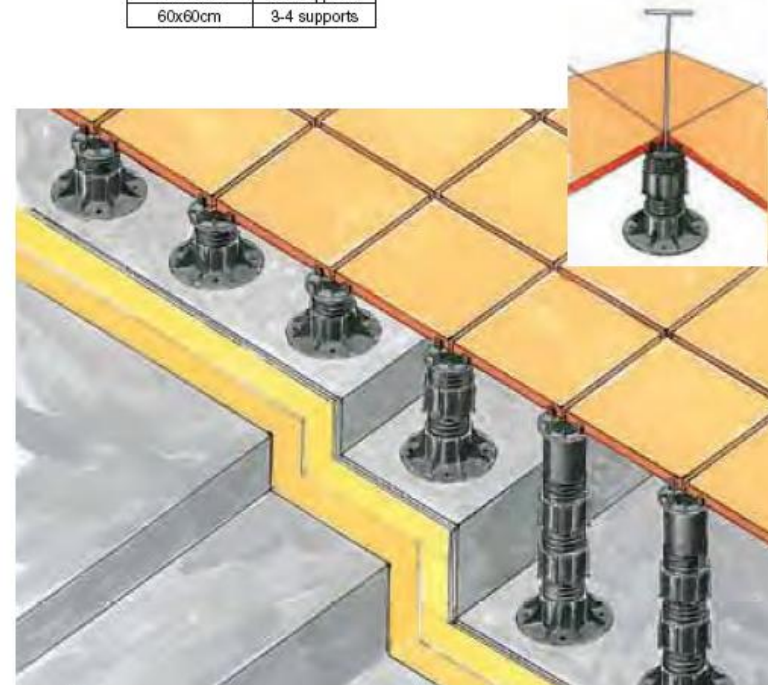

IMPORTANT: IN THE EVENT OF A SUPPORT BEING PLACED AT A CORNER, IT WILL BE NECESSARY TO REMOVE ALL FOUR SPREADER FINS. IF APPLIED ONTO A WALL, ONLY TWO OF THE FINS MUST BE REMOVED.

Nurapad & Nurajack Installation Guide

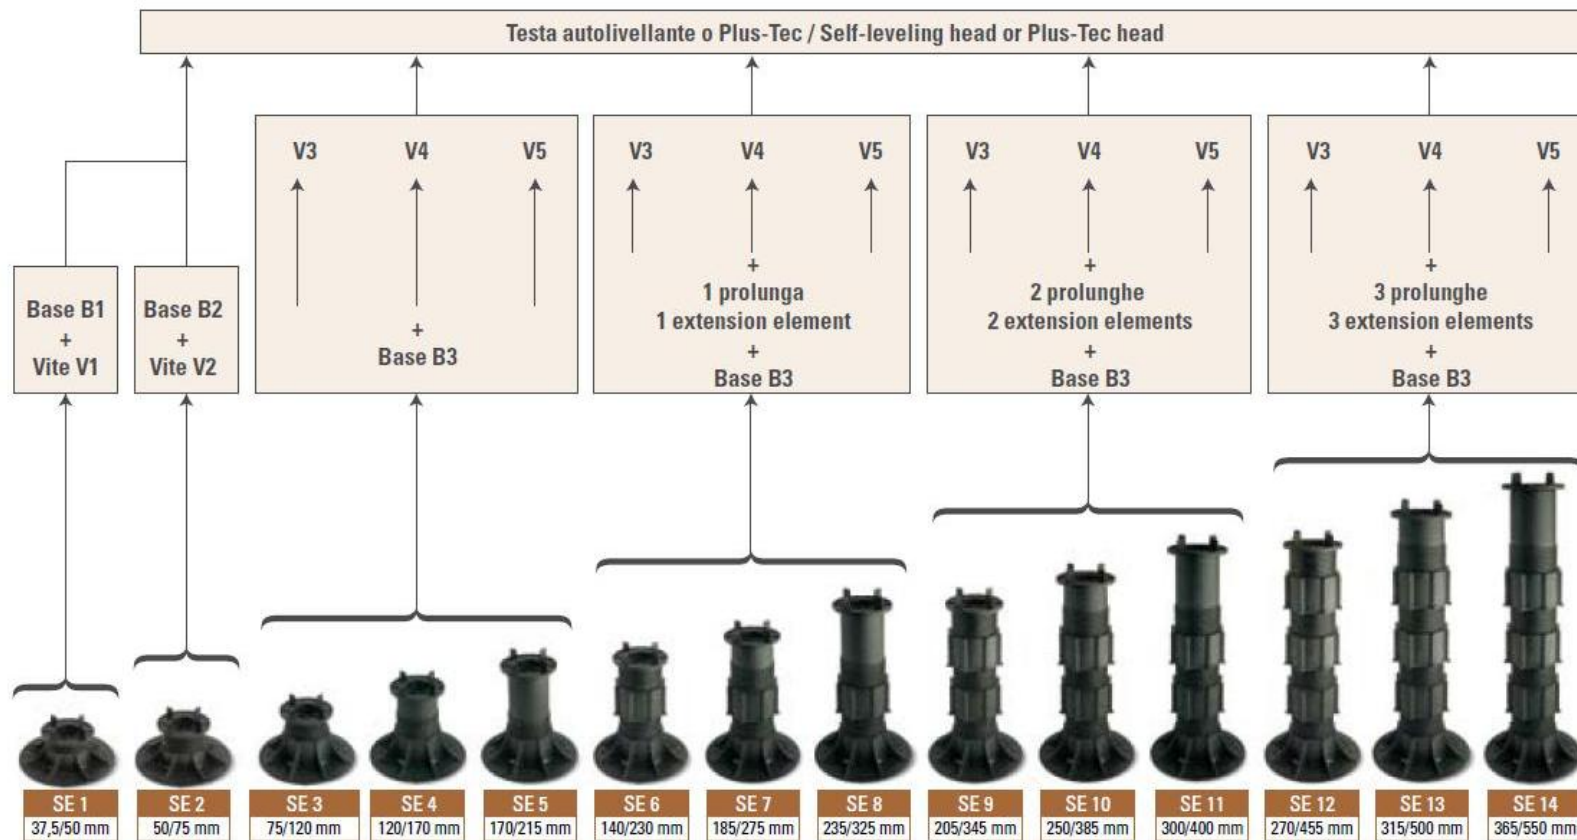

Contact Nuralite on 09 579 2046 or 0800 Nuralite for answers to any questions regarding installation of these products